

Photodiode as current source

Student Group

First Name	Surname	Matrikel Nr.

Table of Contents

Photo Diode as current source 2

Photo Diode as current source



Fig. 2: Inverting Op-Amp: Photo Diode BPW 34 S



Fig. 3: Inverting Op-Amp: Diagramms of BPW 34 S

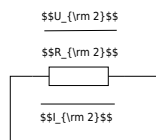


Fig. 4: Inverting Op-Amp: Photo Diode as current source

$$U_{DD} \approx 10\text{ V}, U_{SS} \approx -10\text{ V}$$

We assume a good illuminated room of 300 lx, illuminated by a white LED. White light is a mixture of many wavelengths across the visible spectrum, roughly 380 to 780 nm.

For a typical white LED, the spectrum usually comes from a blue LED chip with a peak around 450 nm, plus a broader phosphor emission that spreads across green, yellow, and red wavelengths.

For an easier calculation, we take a mean value of 500 nm which is close to the peak value of the blue LED (in reality a greenish light) and 300 lx for the illumination.

In the diagram in figure 3 we see that the sensitivity of the photo diode at 500 nm is only 30%. The maximum current (100%) at 300 lx is 30 μA .

Now we can calculate the current we expect from the diode at 300 lx:

$$I_1 = 30\ \mu\text{A} * 0.3$$

$$I_1 \approx 10\ \mu\text{A}$$

30% of 30 μA is roughly 10 μA .

Complete the arrows in the schematic of the circuit.

Calculate R_2 so that $U_{OUT} = 5\text{ V}$ at 300 lx. Take a resistor from the E6 series that is as close as possible to the calculated value.

$$I_D = ?$$

$$I_2 = ?$$

U_{OUT}

U_2

R_2

What value would you expect for U_D and why?

U_D

\dots

\dots

\dots

\dots

\dots

\dots

What value would you expect for U_D when it is not connected to the Op-Amp or any other electronic component (open-circuit voltage) at 300 lx?

$U_{D \sim}$

\dots

\dots

\dots

\dots

\dots

From:
<https://wiki.mexle.org/> - MEXLE Wiki

Permanent link:
https://wiki.mexle.org/lab05_en/inverting_op-amp_photo_diode_as_current_source?rev=1776676148

Last update: **2026/04/20 11:09**

